

Foot Switch Individual Up & Down

Compatible with the following:

Power-Pole XL 8' 2008 & Earlier; Power-Pole Pro Series 6' or 8' & Later; Power-Pole Signature Series 4', 6', & 8' 2010 & Later

Power-Pole Sportsman Series 6', 8' 2010 & Earlier *Note:* Only If Sportsman Series Accessory Adapter Kit is added.

Hardware

Qty (1) Wire harness Pro-Series 24ft.

Qty (1) Y adapter


Qty (3) Wire connector BC heat shrink 18 AWG

Qty (4) Screw countersink #8

Qty (2) Switch one button

Installation Tools

- Philips screw driver
- Drill
- 3/32 steel drill bit
- Wire crimper
- Heat gun or Lighter
- Wire cutter

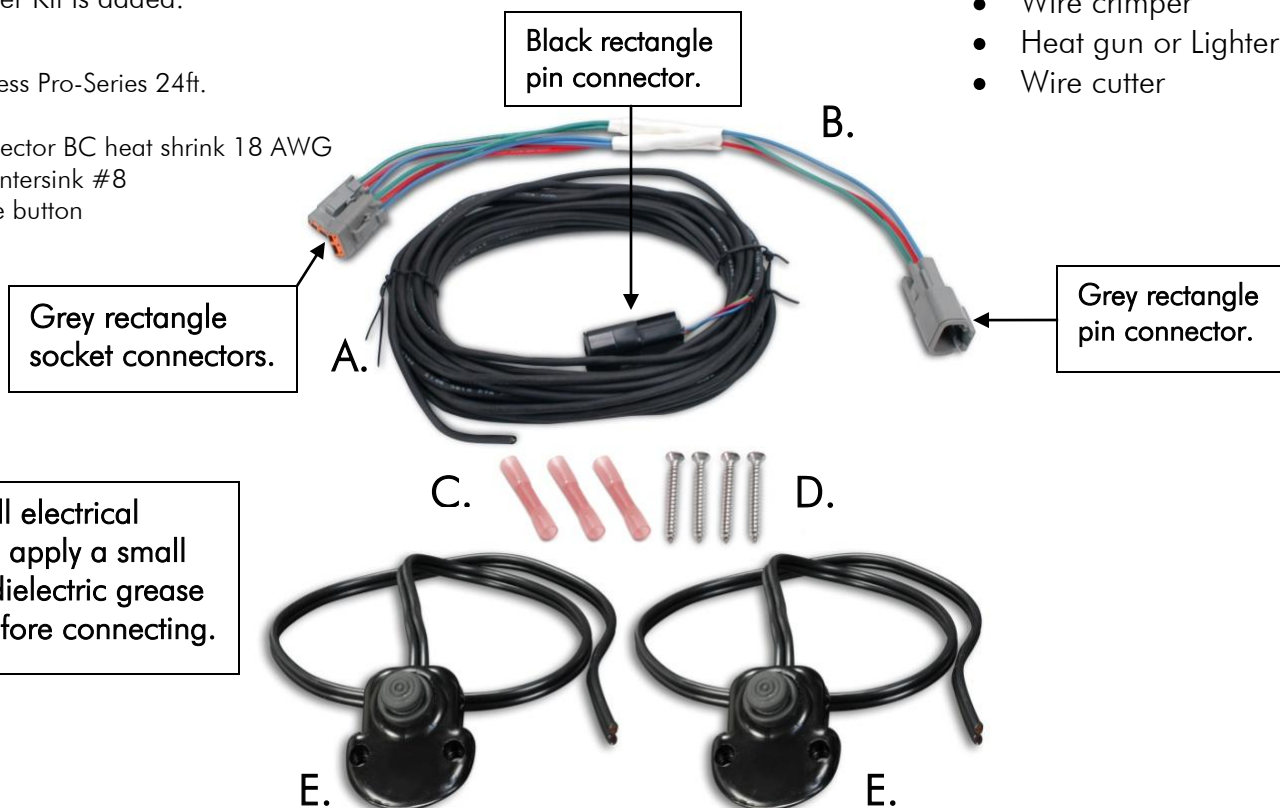

Foot Switch Instructions:

Step 1 Place switches button E. in desired location and mark holes.

Step 2 Now pre-drill marked holes with 3/32 steel drill bit and screw down push button switches with screws D.

Step 3 Next, unplug **existing** wiring harness A from small black relay box. *Note: This relay box is connected to your hydraulic pump with a blue and green wire.*

Step 4 Plug black rectangle pin connector from **existing** wiring harness into one of the grey rectangle socket connectors on the Y adapter B.

Step 5 Plug black rectangle pin connector from Pro wiring harness A into grey rectangle socket connector on the Y adapter B.

Step 6 Plug grey rectangle pin connector from Y adapter B into rectangle socket plug on relay.

Step 7 Now route Pro wiring harness A up to switch buttons E wires and cut off any excess wires that is not needed.

Step 8 Take one wire from each of the switch button E wires and butt connect them to the **red** wire on the end of Pro wiring harness A by using one pink wiring connector C. *Note: it does not matter which of the two wires you chose.*

Step 9 Take remaining wire from one of the switch buttons E and butt connect it to the **blue** wire on the Pro wiring harness A by using one pink wire connector C.

Step 10 Take remaining wire from the other switch button E and butt connect it to the **green** wire on the Pro wiring harness A by using the last pink wire connector C.

Step 11 Crimp and heat shrink all pink wire connectors C.

For Technical Support Please Call 813-689-9932 opt 2.

