

## Power-Pole® Standard Spike Replacement Instructions

### Tools needed:


1. Hammer
2. 3/8" x 4" drift or flat punch.
3. Rubber Mallet
4. 5ft piece of 2x4 wood

Caution: Worn spikes may have fibers that can cause skin irritation. Gloves may be required.

### Step 1 (Remove the broken spike)

1. Start with the Power-Pole anchor either in the stowed position or deployed on to a support as shown in the example below.
2. Insert the punch in the spike removal hole at the top of the knuckle.
3. Using a hammer drive the punch down until the spike is completely removed from the knuckle.

**Note:** If replacing the standard spike with an Everflex™ spike you must remove the white bushing from inside the knuckle before inserting the new spike.

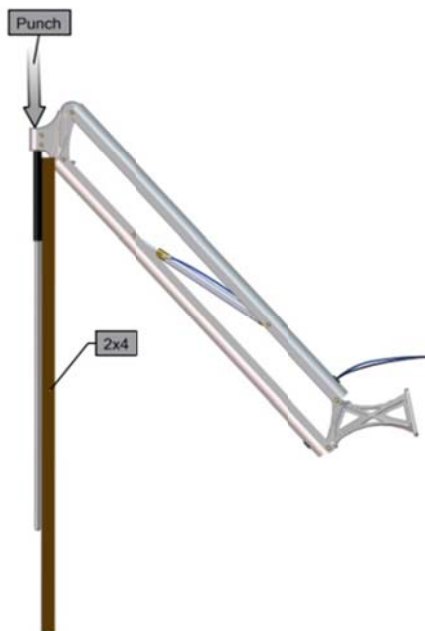

### Step 2 (Install the new spike)

1. Stand the spike up the ground and deploy the Power-Pole down on to the spike. (Ground surface must be solid.)
2. Have someone hold the down button during following process.
3. Using a rubber mallet drive the top of the knuckle down on to the spike until it is at least 50% inserted.

